
Choose your PowerDrop

Three-phase equipment supplied from L1, L2 and L3 on T225 busway.

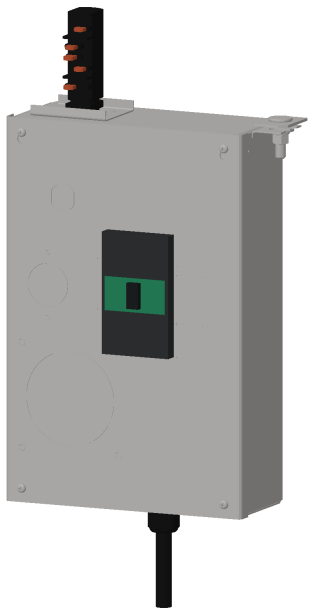

Breakered power where the equipment needs it.
Choose branch amperage, matching equipment connection and outlet arrangement. Then complete the applicable ordering details.

20A/30A
NEMA connections at the supported ratings shown on page 2.

50A / 60A / 100A
IEC Pin & Sleeve. Each higher-amperage build has one output. A 50A IEC build uses a 60A-rated device protected by a 50A breaker.

Representative compact enclosure. Cord continues to the selected female connector; length and termination depend on the build.

Equipment supply	Busway supply
208V 3-phase; neutral where specified	208Y/120V
480V 3-phase; neutral where specified	480Y/277V

Choose the outlet arrangement

Arrangement	Protection and selection
One connector cord	One 3-pole circuit breaker; enclosure follows the selected base.
Multiple outputs	Up to 2 outputs only where listed on page 2. Each branch output has its own 3-pole breaker.

Download the selected cut sheet after choosing the arrangement. Factory orientation is not required for that base download. Complete ordering details for a configured sheet.

Build your 3-pole PowerDrop

trackbusway.com/products/t225-3-pole-breakered-drop-cord

Choose the connection

Click a blue catalogue number to open that build. Numbers shown: one output, standard ground, no monitoring. Supported alternatives appear at right.

Breaker / supply	Connection & base catalogue number	Outputs	Grounding / GFCI
20A / 208V 3-ph	**L15-20C** PT225-C-10-DCXX-L1520C-G	1/2	Standard / IG
20A / 208Y/120V	**L21-20C** PT225-C-10-DCXX-L2120C-G	1/2	Standard / IG
20A / 480V 3-ph	**L16-20C** PT225-C-10-DCXX-L1620C-G	1/2	Standard
20A / 480Y/277V	**L22-20C** PT225-C-10-DCXX-L2220C-G	1/2	Standard / IG
30A / 208V 3-ph	**L15-30C** PT225-C-10-DCXX-L1530C-G	1/2	Standard / IG
30A / 208Y/120V	**L21-30C** PT225-C-10-DCXX-L2130C-G	1/2	Standard / IG
30A / 480V 3-ph	**L16-30C** PT225-C-10-DCXX-L1630C-G	1/2	Standard
30A / 480Y/277V	**L22-30C** PT225-C-10-DCXX-L2230C-G	1/2	Standard / IG
50A / 208V 3-ph	**460C9W** PT225-C-10-DC12-460C9W-CB50-G	1	Standard
50A / 208Y/120V	**560C9W** PT225-C-10-DC12-560C9W-CB50-G	1	Standard
50A / 480V 3-ph	**460C7W** PT225-C-10-DC12-460C7W-CB50-G	1	Standard
50A / 480Y/277V	**560C7W** PT225-C-10-DC12-560C7W-CB50-G	1	Standard
60A / 208V 3-ph	**460C9W** PT225-C-10-DCXX-460C9W-G	1	Standard
60A / 208Y/120V	**560C9W** PT225-C-10-DCXX-560C9W-G	1	Standard
60A / 480V 3-ph	**460C7W** PT225-C-10-DCXX-460C7W-G	1	Standard
60A / 480Y/277V	**560C7W** PT225-C-10-DCXX-560C7W-G	1	Standard
100A / 208V 3-ph	**4100C9W** PT225-C-10-DC12-4100C9W-CB100-G	1	Standard
100A / 208Y/120V	**5100C9W** PT225-C-10-DC12-5100C9W-CB100-G	1	Standard
100A / 480V 3-ph	**4100C7W** PT225-C-10-DC12-4100C7W-CB100-G	1	Standard
100A / 480Y/277V	**5100C7W** PT225-C-10-DC12-5100C7W-CB100-G	1	Standard

Catalogue bases exclude phase and factory orientation. The full fixed base is retained. DC12 identifies the included 12 ft cord on new 50A/100A builds. IG = isolated ground; use only listed combinations.

Compare NEMA & IEC connections
trackbusway.com/products/t225-3-pole-breakered-drop-cord

Read the catalogue number

The selected base supplies the fixed codes. Complete only the applicable order selections.

Example: 30A, 208V 3-ph, one L15-30C

PT225-C-10-DC08-L1530C-G **-R**

Base configuration + specified 8 ft cord — Orientation

Code / field	Meaning
PT225	T225 tap-off product prefix.
C-10 / S-10	Compact / standard enclosure designation. Retain the enclosure assigned to the selected configuration.
DC08 / DC12 / DCXX	Drop-cord length: 08 = 8 ft; 12 = 12 ft; XX = length to be specified. New 50A/100A builds include 12 ft.
L1530C	Three-pole branch connection from all three phases; neutral only where the device requires it. C identifies a cord connector; R within a device code identifies a mounted receptacle.
IG	IG precedes the applicable device code. Only the matrix combinations are offered.
CB50 / CB100	Retain these fixed identifiers when present. CB50 / CB100 distinguish the breaker rating from the output device rating.
Final T / R	All three phases are connected. No phase suffix is added. Final -T or -R is the separately chosen factory breaker orientation.

Retain the complete fixed base, including its terminal **-G** and any other existing characters. Grounding follows the selected build and applicable **IG** prefix. All examples show deliberate selections, not defaults.

Multiple outputs retain multiple device tokens

PT225-S-10-DC08-L1530C-L1530C-G-T

Two outputs, each with its own breaker; typical factory orientation. Phase connection is fixed: L1 + L2 + L3 for each output. No phase entry is required.

50A example retains the explicit breaker rating

PT225-C-10-DC12-460C9W-CB50-G-T

One 60A-rated IEC output protected by a 50A, 3-pole breaker. Included 12 ft cord. The output-device rating does not increase the branch rating.


Complete the ordering details

Use these choices in the builder, then download the completed configuration sheet.

Grounding. Choose standard or isolated ground only where offered on page 2. Coordinate with the compatible busway grounding arrangement.

Power monitoring. Use **Request Power Monitoring** to carry the current configuration into a request. Existing monitored offerings remain request-only at documented ratings; new 50A/100A additions do not include monitoring. Explore critical power monitoring.

Phase connection

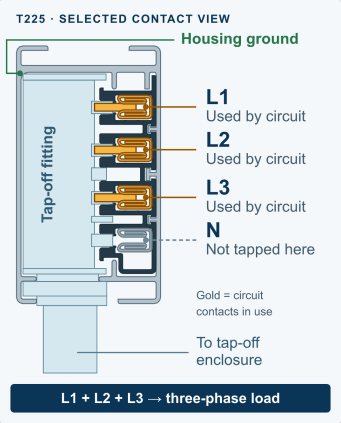


One branch circuit shown


Each output connects to L1 + L2 + L3.
Each output has its own 3-pole breaker protecting its three lines. No separate phase choice or suffix is required. Neutral is included only where specified; equipment ground is retained.

Record circuit assignments individually; examples are not preset selections. Confirm the allocation and total connected load with the factory.

CHOOSE THE FACTORY BREAKER ORIENTATION

Both views below show the breaker facing left. Enclosures continue below the break lines.

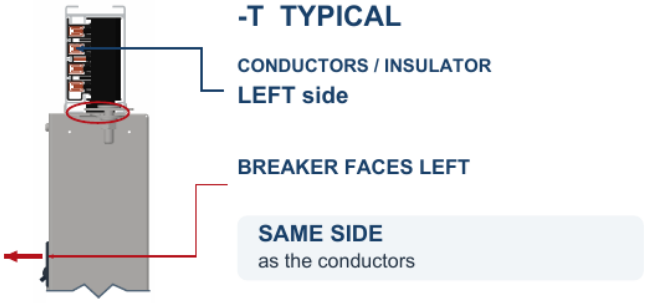

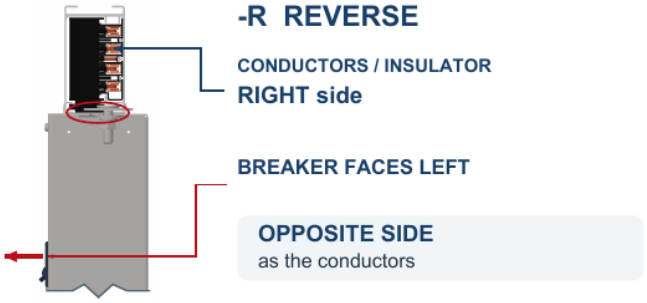

FACTORY-SET. NOT FIELD-ROTATABLE. Select -T or -R when ordering.

Cord length. Specify length for DCXX builds. New 50A/100A PowerDrops include 12 ft (DC12); other lengths require quotation. Confirm the quoted length and price.

Before ordering: confirm supply, branch rating, matching plug, arrangement, grounding, monitoring and applicable phase/orientation choices. **Factory-set. Not field-rotatable.** Specify required assembly SCCR; a component interrupting rating does not establish assembly SCCR. The factory unit label governs.

Build your 3-pole PowerDrop

trackbusway.com/products/t225-3-pole-breakered-drop-cord

Choose your Outlet Box

Three-phase equipment supplied from L1, L2 and L3 on T225 busway.



Illustrative device color; actual color varies.

Breakered power where the equipment needs it.
Choose branch amperage, matching equipment connection and outlet arrangement. Then complete the applicable ordering details.

20A/30A
NEMA connections at the supported ratings shown on page 2.

50A / 60A / 100A
IEC Pin & Sleeve. 50A NEMA 15-50 is also offered. Each higher-amperage build has one output. A 50A IEC build uses a 60A-rated device protected by a 50A breaker.

Representative compact enclosure. Mounted receptacle depends on the selected connection. Use the selected configuration sheet for the specified assembly.

Equipment supply	Busway supply
208V 3-phase; neutral where specified	208Y/120V
480V 3-phase; neutral where specified	480Y/277V

Choose the outlet arrangement

Arrangement	Protection and selection
One mounted receptacle	One 3-pole circuit breaker; enclosure follows the selected base.
Multiple outputs	Up to 2 outputs only where listed on page 2. Each branch output has its own 3-pole breaker.

Download the selected cut sheet after choosing the arrangement. Factory orientation is not required for that base download. Complete ordering details for a configured sheet.

Build your 3-pole Outlet Box

trackbusway.com/products/t225-3-pole-breakered-outlet-box

Choose the connection

Click a blue catalogue number to open that build. Numbers shown: one output, standard ground, no monitoring. Supported alternatives appear at right.

Breaker / supply	Connection & base catalogue number	Outputs	Grounding / GFCI
20A / 208V 3-ph	**L15-20R** PT225-C-10-OB-L1520R-G	1/2	Standard / IG
20A / 208Y/120V	**L21-20R** PT225-C-10-OB-L2120R-G	1/2	Standard / IG
20A / 480V 3-ph	**L16-20R** PT225-C-10-OB-L1620R-G	1/2	Standard
20A / 480Y/277V	**L22-20R** PT225-C-10-OB-L2220R-G	1/2	Standard / IG
30A / 208V 3-ph	**L15-30R** PT225-C-10-OB-L1530R-G	1/2	Standard / IG
30A / 208Y/120V	**L21-30R** PT225-C-10-OB-L2130R-G	1/2	Standard / IG
30A / 480V 3-ph	**L16-30R** PT225-C-10-OB-L1630R-G	1/2	Standard
30A / 480Y/277V	**L22-30R** PT225-C-10-OB-L2230R-G	1/2	Standard / IG
50A / 208V 3-ph	**15-50R** PT225-C-10-OB-1550R-CB50-G	1	Standard
50A / 208V 3-ph	**460R9W** PT225-C-10-OB-460R9W-CB50-G	1	Standard
50A / 208Y/120V	**560R9W** PT225-C-10-OB-560R9W-CB50-G	1	Standard
50A / 480V 3-ph	**460R7W** PT225-C-10-OB-460R7W-CB50-G	1	Standard
50A / 480Y/277V	**560R7W** PT225-C-10-OB-560R7W-CB50-G	1	Standard
60A / 208V 3-ph	**460R9W** PT225-C-10-OB-460R9W-G	1	Standard
60A / 208Y/120V	**560R9W** PT225-C-10-OB-560R9W-G	1	Standard
60A / 480V 3-ph	**460R7W** PT225-C-10-OB-460R7W-G	1	Standard
60A / 480Y/277V	**560R7W** PT225-C-10-OB-560R7W-G	1	Standard
100A / 208V 3-ph	**4100R9W** PT225-C-10-OB-4100R9W-CB100-G	1	Standard
100A / 208Y/120V	**5100R9W** PT225-C-10-OB-5100R9W-CB100-G	1	Standard
100A / 480V 3-ph	**4100R7W** PT225-C-10-OB-4100R7W-CB100-G	1	Standard
100A / 480Y/277V	**5100R7W** PT225-C-10-OB-5100R7W-CB100-G	1	Standard

Compare NEMA & IEC connections
trackbusway.com/products/t225-3-pole-breakered-outlet-box

Read the catalogue number

The selected base supplies the fixed codes. Complete only the applicable order selections.

Example: 30A, 208V 3-ph, one L15-30R

PT225-C-10-OB-L1530R-G
Base configuration

-R
Orientation

Code / field	Meaning
PT225	T225 tap-off product prefix.
C-10 / S-10	Compact / standard enclosure designation. Retain the enclosure assigned to the selected configuration.
OB	Outlet box with female receptacle(s) mounted on the enclosure. No drop-cord length field.
L1530R	Three-pole branch connection from all three phases; neutral only where the device requires it. C identifies a cord connector; R within a device code identifies a mounted receptacle.
IG	IG precedes the applicable device code. Only the matrix combinations are offered.
CB50 / CB100	Retain these fixed identifiers when present. CB50 / CB100 distinguish the breaker rating from the output device rating.
Final T / R	All three phases are connected. No phase suffix is added. Final -T or -R is the separately chosen factory breaker orientation.

Retain the complete fixed base, including its terminal **-G** and any other existing characters. Grounding follows the selected build and applicable **IG** prefix. All examples show deliberate selections, not defaults.

Multiple outputs retain multiple device tokens

PT225-S-10-OB-L1530R-L1530R-G-T

Two outputs, each with its own breaker; typical factory orientation. Phase connection is fixed: L1 + L2 + L3 for each output. No phase entry is required.

50A example retains the explicit breaker rating

PT225-C-10-OB-460R9W-CB50-G-T

One 60A-rated IEC output protected by a 50A, 3-pole breaker. The output-device rating does not increase the branch rating.


Complete the ordering details

Use these choices in the builder, then download the completed configuration sheet.

Grounding. Choose standard or isolated ground only where offered on page 2. Coordinate with the compatible busway grounding arrangement.

Power monitoring. Use **Request Power Monitoring** to carry the current configuration into a request. Existing monitored offerings remain request-only at documented ratings; new 50A/100A additions do not include monitoring. Explore critical power monitoring.

Phase connection

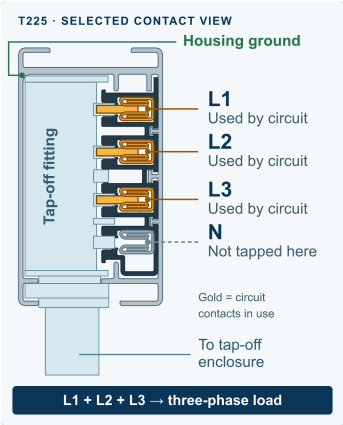


One branch circuit shown


Each output connects to L1 + L2 + L3.
Each output has its own 3-pole breaker protecting its three lines. No separate phase choice or suffix is required. Neutral is included only where specified; equipment ground is retained.

Record circuit assignments individually; examples are not preset selections. Confirm the allocation and total connected load with the factory.

CHOOSE THE FACTORY BREAKER ORIENTATION

Both views below show the breaker facing left. Enclosures continue below the break lines.

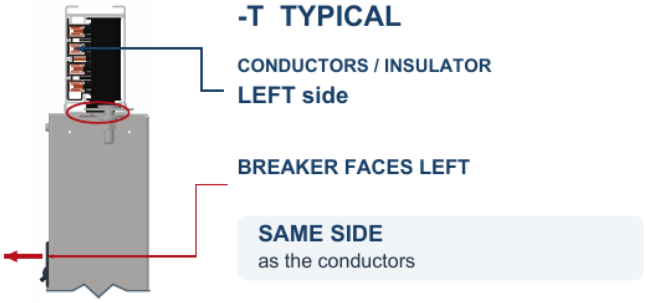

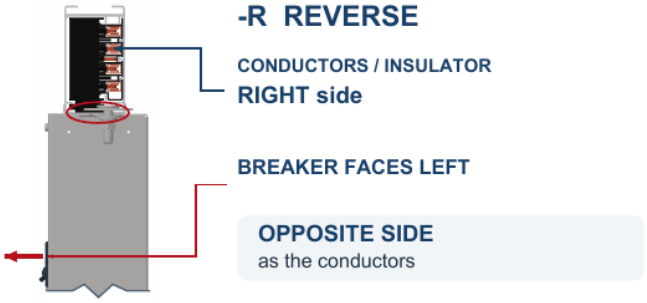

FACTORY-SET. NOT FIELD-ROTATABLE. Select -T or -R when ordering.

Mounted outlets. The selected device must match the equipment plug and supply. Outlet Boxes do not require a drop-cord length selection.

Before ordering: confirm supply, branch rating, matching plug, arrangement, grounding, monitoring and applicable phase/orientation choices. **Factory-set. Not field-rotatable.** Specify required assembly SCCR; a component interrupting rating does not establish assembly SCCR. The factory unit label governs.

Build your 3-pole Outlet Box

trackbusway.com/products/t225-3-pole-breakered-outlet-box